

EX Series Touch Panel




Manual www.ltech-led.com


LTECH

System diagram

L-BUS

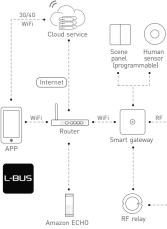

--- Wireless connection
Wired connection

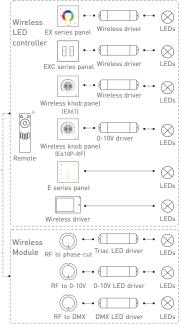

EX series touch panel



Product features

- . Adopt wireless RF and wired DMX512 protocol 2 in 1 control mode, more flexible and convenient for project installation.
- · Advanced RF wireless sync/zone control technology, make sure dynamic color modes synchronously among multiple drivers.
- Install touch panel at different areas, can control the same LED light, achieve multi-panel control, no quantity limited.
- · Touch keys with chord and LED indicator.
- Adopts capacitive touch control technology makes LED dimming selection more user-friendly.
- . Compatible with remote and APP control with adding LTECH gateway.

Technical specs

Model	EX1S	EX2	EX4S
Control type	Dimming	СТ	RGBW
Input voltage	100-240Vac		
Output signal	DMX512		
Wireless type	RF 2.4GHz		
Working temp.	-20°C~55°C		
Dimensions	L86×W86×H36(mm)		
Package size	L113×W112×H50(mm)		
Weight(G.W.)	225g		














EX series touch panel

Key functions

- * When blue indicator light of () key is on, long press () to turn on/off buzzer. When white indicator light of () key is on, long press (1) to match code.
- * EX panel's scene-mode keys are corresponding with gateway APP's scenes, the scenes can be changed by APP or panel.

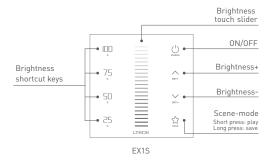


Scene-mode

Short press: play Long press: save

ON/OFF

Mode

EX series touch panel

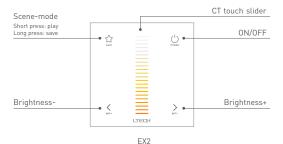

• 🛞

÷

W

LTECH

EX4S

Mode

1. Static red

Brightness/Speed

Touch color circle

White key

Short press: on/off

Long press: brightness

Long press effectively

 
- 2. Static green
- 3. Static blue 4. Static yellow
- 5. Static purple
- 6. Static cyan
- 7 Static white
- 8. RGB jumping
- 9, 7 colors jumping
- 10. RGB color smooth 11 Full-color smooth
- 12. Static blue
- (only close RGB)

* White light only: press & key to choose black mode, then press W key.

 
LTECH

Product size


Unit: mm







Terminals

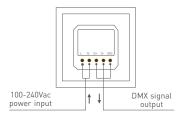











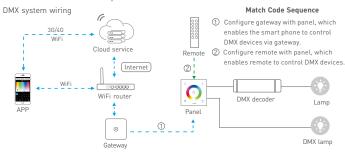


Wireless system wiring

Match Code Sequence

 - 1 Match wireless driver with gateway. ② Match panel with gateway.
- 3G/4G (3) Match remote with panel, match remote WiFi with wireless driver. Cloud service



Gateway

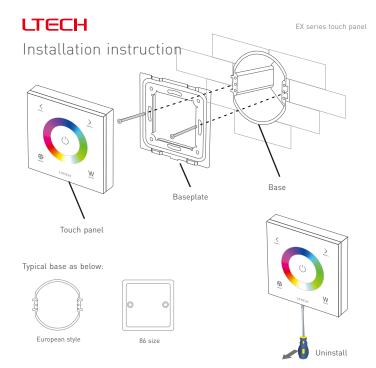

DMX

driver

Application composition

DMX512 control









panel

Wireless control



panel






WiFi master Remote

controller



LTECH

DMX wiring

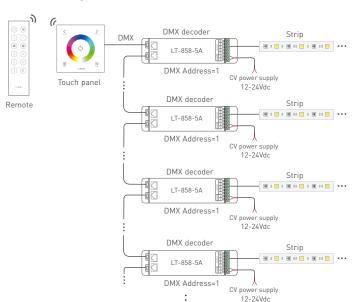

Strip

Strip

Strip @ | . | @ || . | @ || . . .

Strip

CV power supply 5-24Vdc

CV power supply 5-24Vdc

CV power supply

5-24Vdc

Wireless driver

Wireless driver

Wireless driver

RF wireless wiring a



Touch panel



Remote


distance.

Multiple wireless receivers (F4-3A/ F4-5A/F4-DMX-5A/F5-DMX-4A) can be matched with FX series touch panel within effective

Wireless driver CV power supply 5-24Vdc

To avoid the signal interference, the installation needs to keep aways from the large area metal material or the metal material space.


Multi-panel control wiring

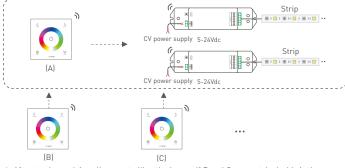

- * After touch panel A realizes controlling the lamps, if B and C are matched with A, they can also control the lamps.
- * Linkage control is also available at connecting with DMX decoders.

Match code between touch panels

 1. Assuming that B matches with A, long press \circlearrowleft on B until all indicator lights flicker.







LTECH

Match code between touch panel & remote

1. Long press (1) on touch panel until all indicator lights flicker.

 


2. Match with F series remote:

Long press On/Off key on F series remote, the indicator light of touch panel stop flicking, match successfully.

EX1S works with remote F1. FX2 works with remote F2.

FX4S works with remote F4



Match with Q series remote:

Long press the matching zone's "On" key on Q series remote, the indicator light of touch panel stop flicking, match successfully.

EX1S works with remote Q1.

EX2 works with remote Q2.

FX4 works with remote 04





* Please match/clear code when (1) indicator light of panel is white.

Match code between touch panel & wireless driver

Touch panels can work with wireless driver F4-3A/F4-5A/F4-DMX-5A/F5-DMX-4A.

Method 1:



2. Long press On/Off key of the panel until all indicator liaht flickina.



3. Power on the driver, ' the lamps flicker slowly, please complete step 4 within 15s.

Wireless driver



4. Short press any key

successfully.

or color circle / slider

on the panel, match



Method 2.

I. Short press "ID learning button" on wireless driver. the lamps flicker, please complete next step within 15s.

Wireless driver

- ID learning Wireless driver
- 2. Long press On/Off key on panel until all indicator liaht flicker.



3. Short press any key or color circle / slider on the panel, match successfully.



* Please match/clear code when () indicator light of panel is white.

12



Match code between touch panel & gateway

1. Long press (1) on touch panel until indicator liahts flicker.

FX2



2. Turn on APP, enter "zone set" interface, click the right top "MATCH" key, then follow the prompts.



Clear code

Press the bottom two key on touch panel simultaneously for 6s, the indicator lights flicker several times, clear code successfully.







* Please match/clear code when \circlearrowleft indicator light of panel is white.



EX series touch panel

Warranty agreement

- 1. We provide lifelong technical assistance with this product:
- · A 5-year warranty is given from the date of purchase. The warranty is for free repair or replacement if cover manufacturing faults only.
- For faults beyond the 5-year warranty, we reserve the right to charge for time and parts.
- 2. Warranty exclusions below:
- . Any man-made damages caused from improper operation, or connecting to excess voltage and overloading.
- The product appears to have excessive physical damage.
- · Damage due to natural disasters and force majeure.
- Warranty label, fragile label and unique barcode label have been damaged.
- The product has been replaced by a brand new product.
- 3.Repair or replacement as provided under this warranty is the exclusive remedy to the customer. LTECH shall not be liable for any incidental or consequential damages for breach of any stipulation in this warranty.
- 4. Any amendment or adjustment to this warranty must be approved in writing by LTECH only.